WATER-RESISTANT PARQUET SKIRTING

Technical data sheet
English

QUICK·STEP®
FLOOR DESIGNERS

General information

Water-resistant parquet skirting which matches the colour of your floor. Easy to install with our One4All Glue or Track. Use the Foamstrip and Hydrokit to obtain a watertight finish. Also available in a white, paintable version (QSHSK80PAINT)

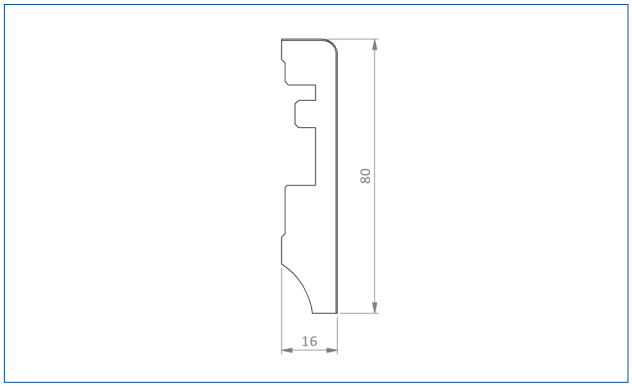

Contents	Composition	Colour
6 x skirting	Moisture resistant MDF core (green) wrapped with real wood veneer	Colour matched
Packaging	Headcartons and shrink-wrapping	-

Order code	Dimensions
QSWPPSKR(-)MM	2400 x 16 x 80 mm

Applicable for:

Quick-Step Cascada floor range.

The floor must be able to expand and contract on all sides. This is why an expansion gap must be provided on all sides of the floor, around pipes, thresholds and under door frames. The exact expansion gap size depends on the floor type. Consult the installation documentation of your Quick-Step floor to know the required size of the expansion gap. To finish off this gap, we offer other skirting and profiles ranges.

Features

Quick-Step accessories are specifically developed for Quick-Step floors.

Our skirtings and profiles flawlessly match the colour of every floor.

Scratch and wear resistant real veneer top layer

Skirtings and profiles are protected against everyday wear and tear.

Water-resistant

Water-resistant skirtings which perfectly match with your Quick-Step Cascada floor.

Quick-Step warranty

Skirtings come with the same warranty as your floor.

SAME WARRANTY QUICK-STEP WARRANTY AS YOUR FLOOR

MATCHING ACCESSORIES

PEFC PEFC/07-32-37

Installation

The water-resistant parquet skirting can be installed in the following way:

1. The water-resistant parquet skirtings can be attached with One4All glue. This multi-functional adhesive is specially designed for the installation of Quick-Step accessories.
   Order code: QSGLUE290

2. The water-resistant parquet skirting can also be installed with the track. Installing it this way enables you to remove it again and to hide cables behind it.
   Order code: NETRACK

3. Use the Foamstrip (NEFOAMSTRIP20) and Hydrokit (QSKITTRANSP) to seal the expansion gap so no water penetrates behind your skirtings and under the floor.

4. Make sure you use a sharp saw blade when mitering your skirtings. Finish cut edges with mitre bond and activator.

Unilin bv division flooring
Ooigemstraat 3, B-8710 Wielsbeke
T: +32 56 67 52 11
unilin.com
quick-step.com

UNILIN | QUICK·STEP FLOOR DESIGNERS